



PRINTING INSTRUCTION

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to the paper size that you will print and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

Select Actual size

Set the paper size

Select the paper size



Scale 100%

IMPORTANT NOTE:

- **ADOBE ACROBAT READER (FREE SOFTWARE)** is recommended to open and print the patterns

link for free download

<https://get.adobe.com/reader>

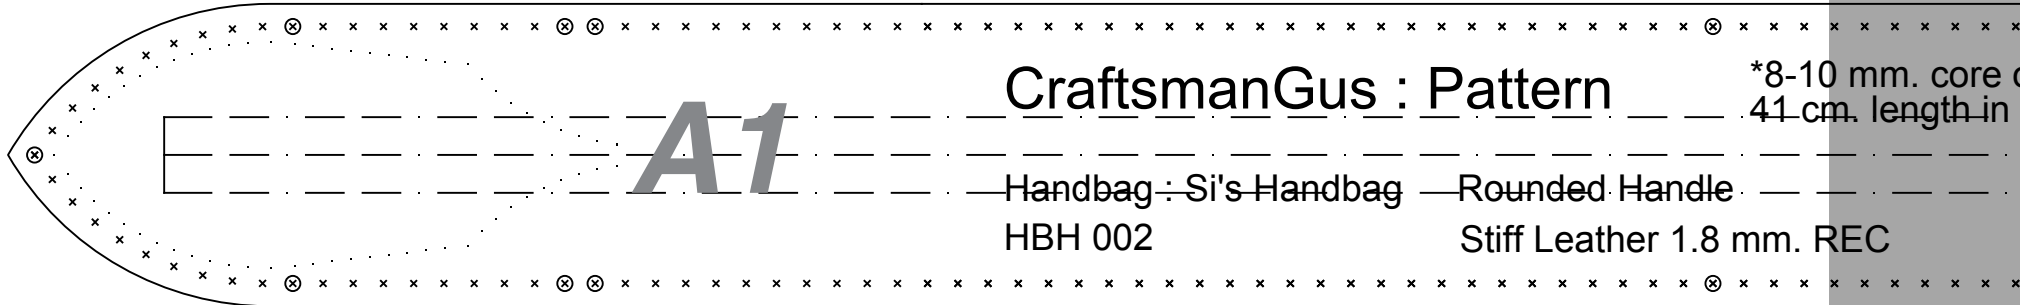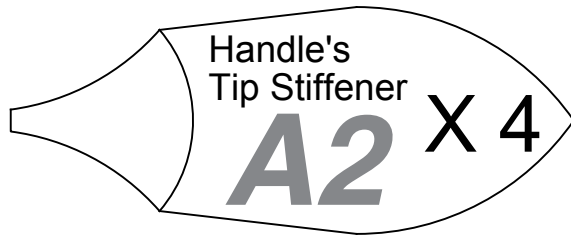


CraftsmanGus : Pattern

*8-10 mm. core c
41 cm. length in

Handbag : Si's Handbag — Rounded Handle —
HBH 002 Stiff Leather 1.8 mm. REC



Tile to page 1

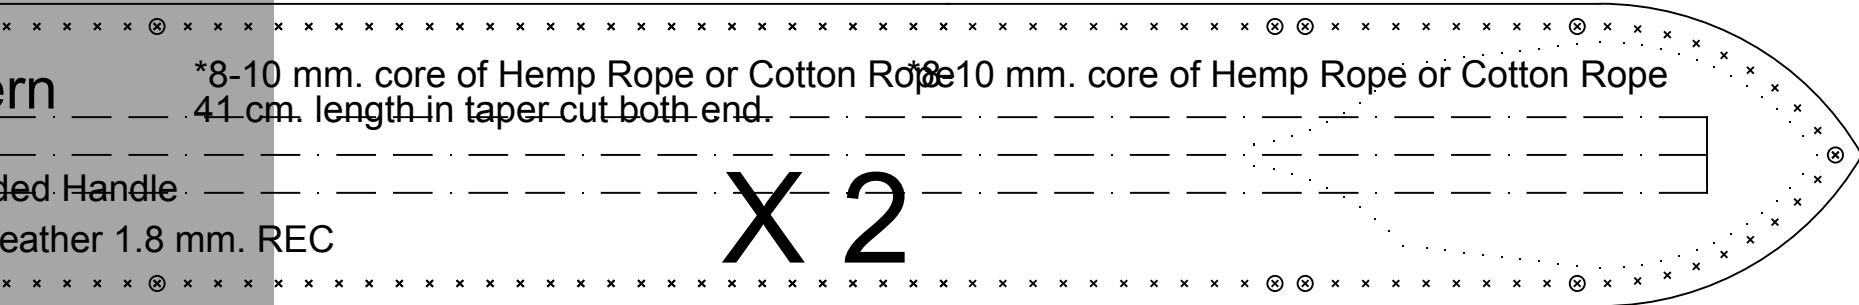



Reverse/ Turned Seams

B1

CraftsmanGus Pattern


Handbag : Si's Handbag

HBH 002

Main Body




1.5/1.8mm Stiff Leather Recommended +

Tile to page 4

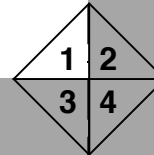



Tile to page 3

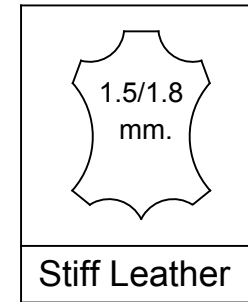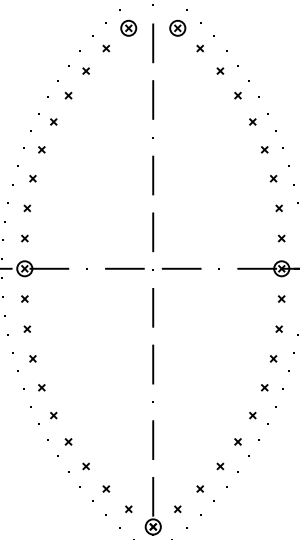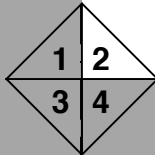

X 2

Reverse/ Turned Seams

Reverse/ Turned S

B1


CraftsmanGus Pattern

Handbag : Si's Handbag

HBH 002

Main Body

1.5/1.8mm Stiff Leather Recommeded +


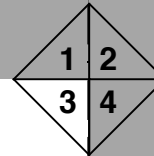


Tile to page 6



Si's Handbag
Page 5 of 19

Tile to page 5

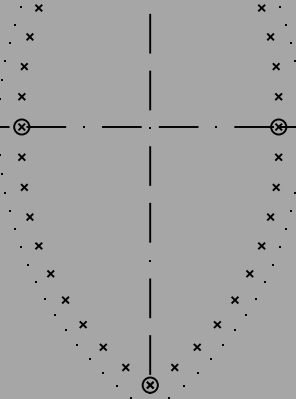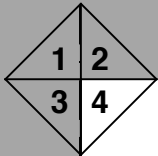


X 2

Reverse/ Turned S





CraftsmanGus Pattern
Handbag : Si's Handbag
HBH 002
Main Body Side Soft Stiffener
0.5 EVA

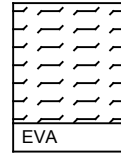

X 2

B3

B2

CraftsmanGus Pattern
Handbag : Si's Handbag
HBH 002
Main Body Soft Stiffener
0.5 EVA

Tile to page 8

Tile to page 7


CraftsmanGus Pattern

Handbag : Si's Handbag

HBH 002

Main Body Soft Stiffener

0.5 EVA

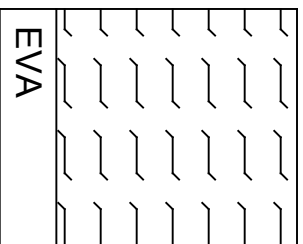

X 2





CraftsmanGus Pattern


Handbag : Si's Handbag

HBH 002

Bottom Patch

1.5/1.8mm Stiff Leather Recommended

B4

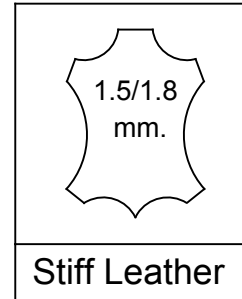

X 2

CraftsmanGus Pattern


Handbag : Si's Handbag

HBH 002

Bottom Filler

1.0 mm Hard Felt

C2

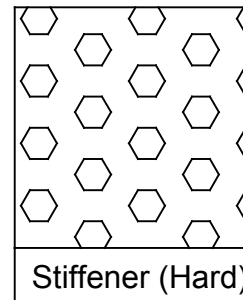

X 1



Tile to page 11

CraftsmanGus Pattern

Handbag : Si's Handbag

HBH 002

Bottom

1.5/1.8mm Stiff Leather Recommeded +

C1


0.5mm Texon shorter 0.3 mm all round

Bottom Structure

1.0 mm Hard Felt x2 layers glued together

Bottom Lining

Cotton Lining

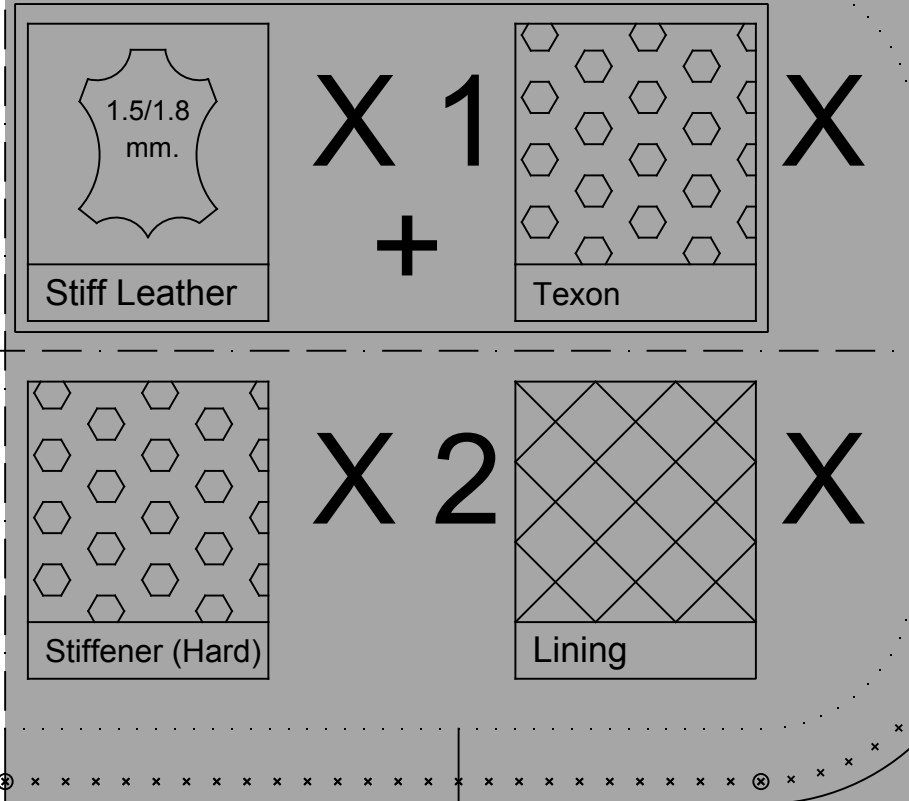



Tile to page 11

CraftsmanGus Pattern

Handbag : Si's Handbag

HBH 002

Bottom

1.5/1.8mm Stiff Leather Recommeded +

0.5mm Texon shorter 0.3 mm all round


Bottom Structure

1.0 mm Hard Felt x2 layers glued together

Bottom Lining




Cotton Lining

C1

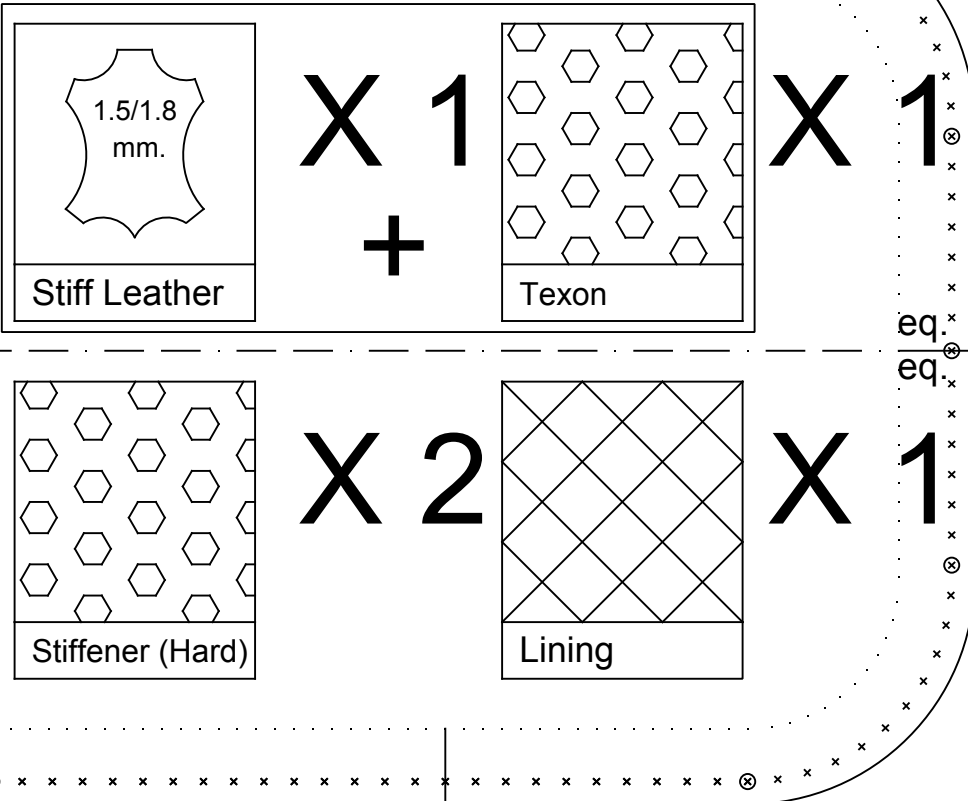





Tile to page 13

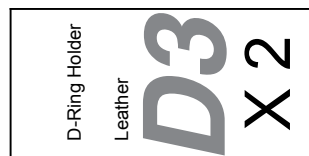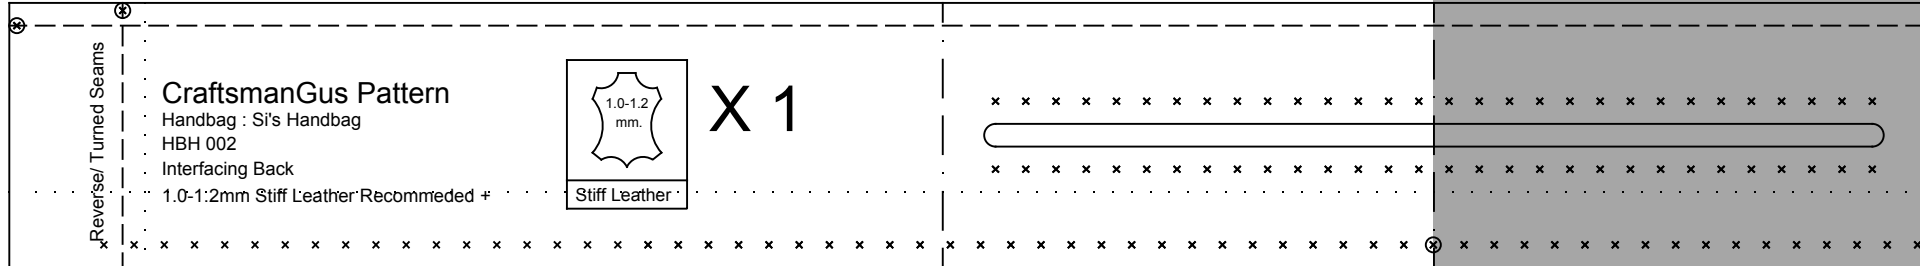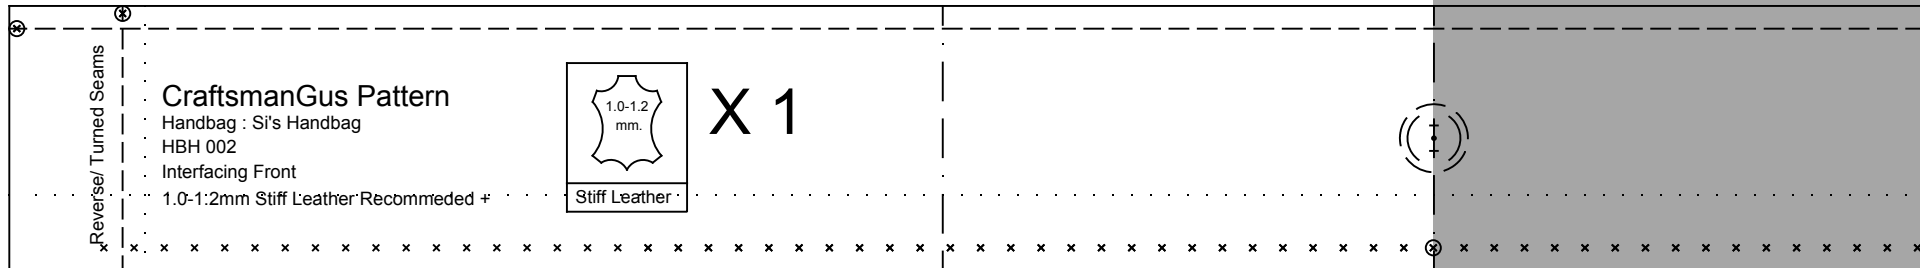




Tile to page 12

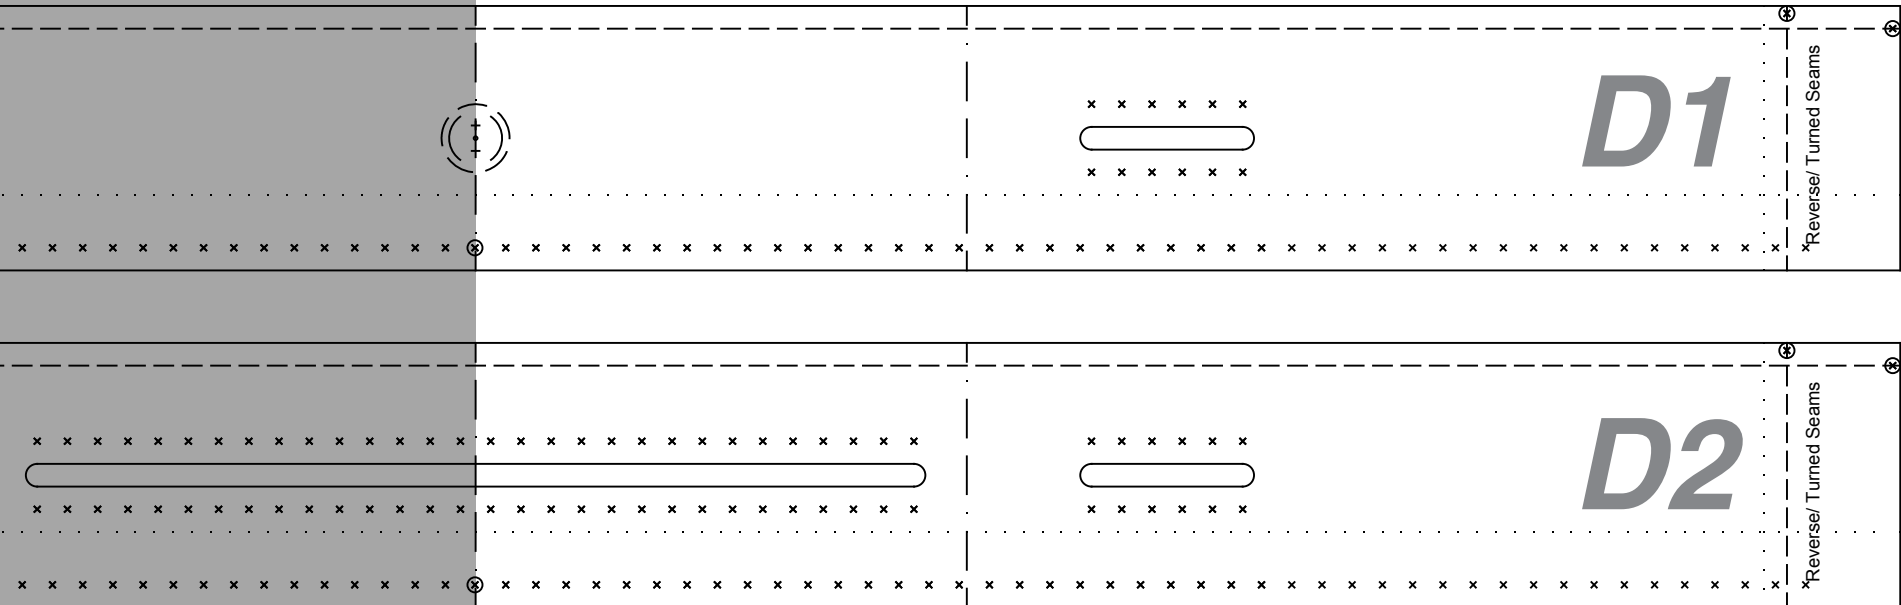


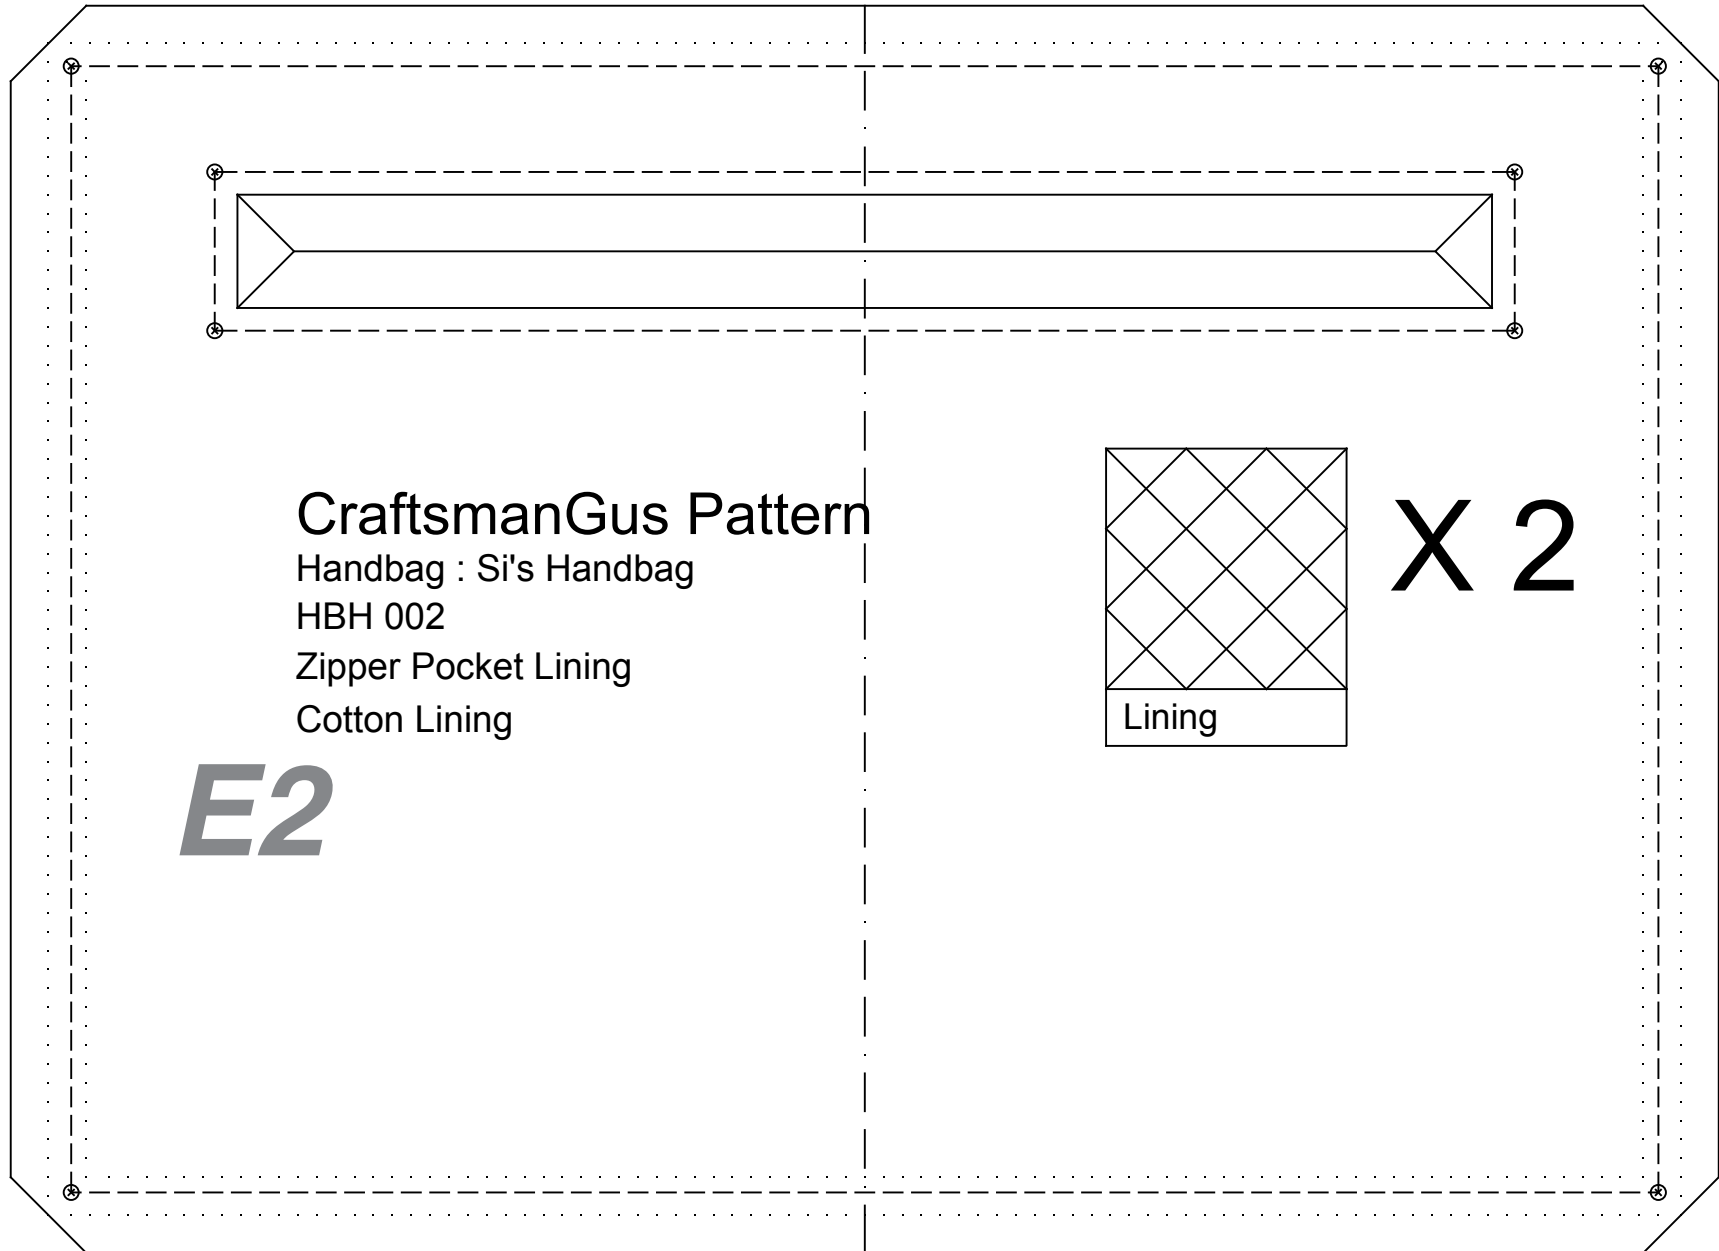

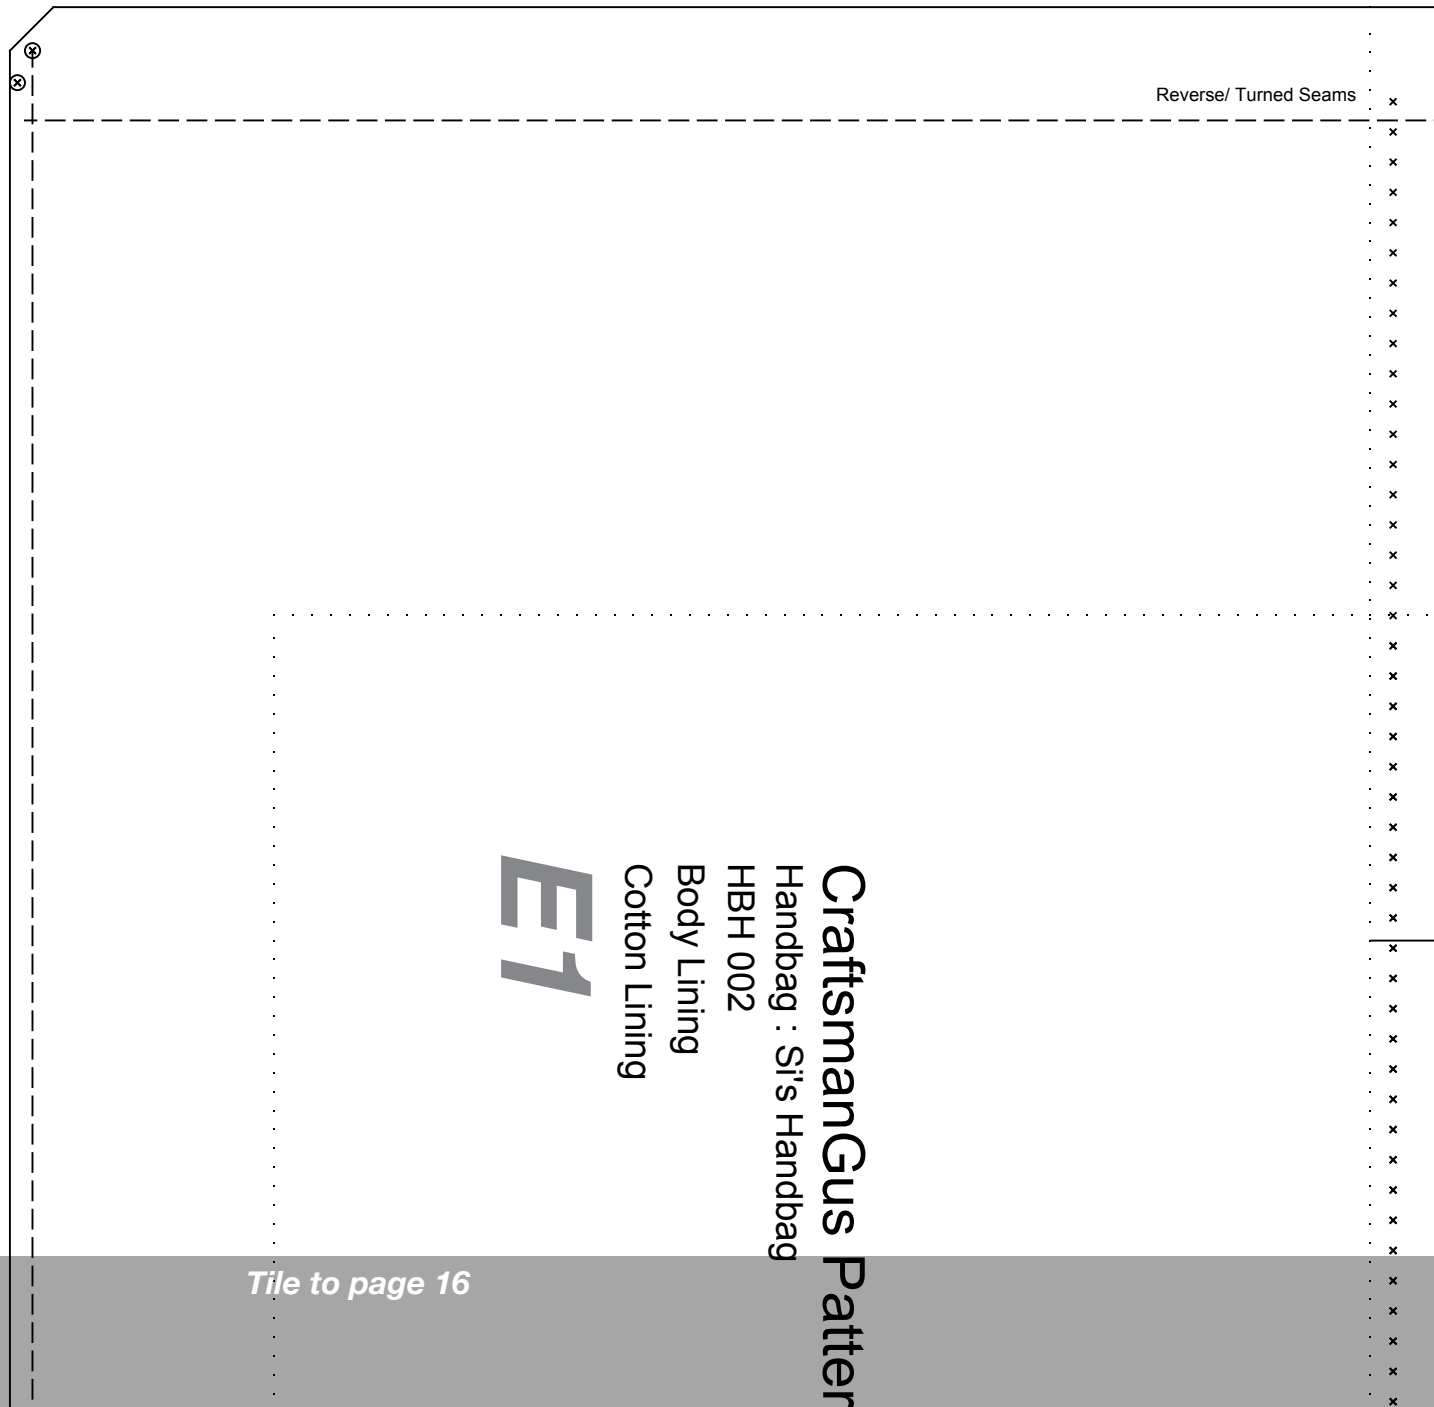




manGus Pattern
: Si's Handbag
ng
ning

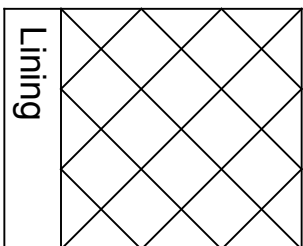

X 2

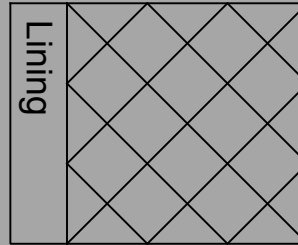

X
2

Reverse/ Turned Seams



CraftsmanGus Pattern


Handbag : Si's Handbag

HBH 002

Flap

1.5/1.8mm Stiff Leather Recommended

F1

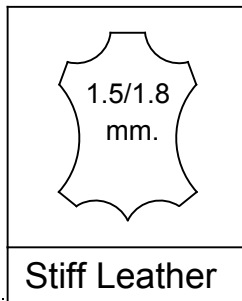

X 1



CraftsmanGus Pattern


Handbag : Si's Handbag

HBH 002

Flap Stiffener

1.5/1.8mm Stiff Leather Recommended

F2

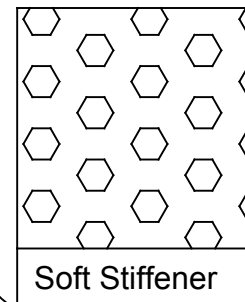

X 1



CraftsmanGus Pattern


Handbag : Si's Handbag

HBH 002

Flap' Lining

0.8/1.0mm Stiff Leather Recommeded

F3

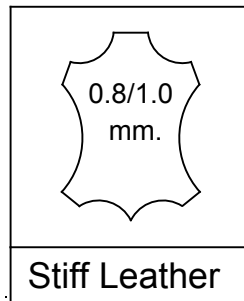

X 1